

# Infiltration: Groundwater Flow Model II


## Objectives

Students will:

- demonstrate the movement of pollution through the ground and understand the process of groundwater contamination.

## Procedure

- Add water slowly to saturate the sand and rocks. Observe the water table and discuss how the addition of precipitation affects the level of the water table. The sprayer represents a well which will be used to lower the water table.
- Use the pump sprayer to withdraw water from the flow model. Observe the cone of depression followed by water gradually filling in the area.
- Add food coloring to a small amount of water. Fill the syringe with the colored water. Inject this "pollutant" into the top layer of sand.
- Use the pump sprayer to withdraw water from the model and observe the movement of the pollutant.
- Draw water level below top of sand. Spill pollutant (food coloring) on top of sand. When water is withdrawn at this time, pollutant will not reach well water unless water level is over sand.
- Spray water on sand to simulate rain and draw water from the model with the pump. Observe action of the pollutant.

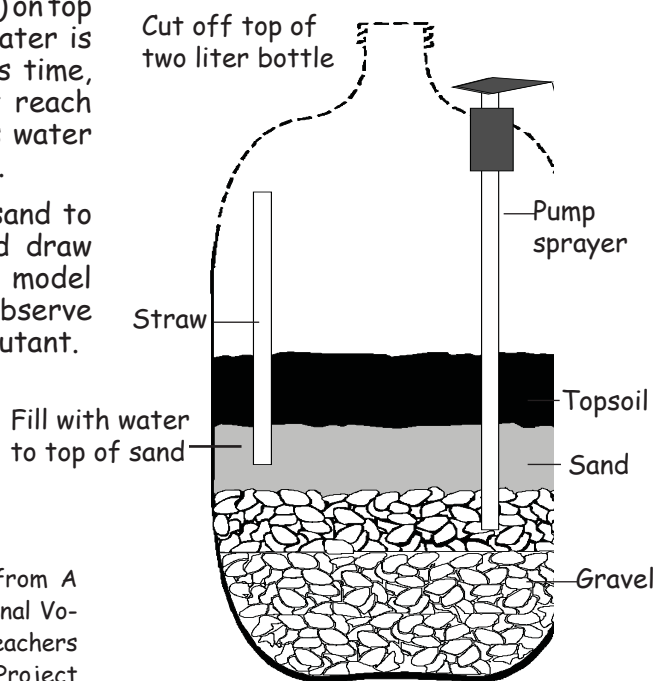

**No. 1 Groundwater contamination demonstration**

Used with permission from A Hidden Treasure, National Vocational Agriculture Teachers Association, Jeff Moss, Project Manager, Normal, IL.

Used with permission from A Hidden Treasure, National Vocational Agriculture Teachers Association, Jeff Moss, Project Manager, Normal, IL.

## Materials

- 2 liter clear plastic container
- Pump sprayer from a bottle of all-purpose cleaner
- Small piece of nylon fabric
- Masking tape or rubber band
- Transparent straws
- Small rocks or gravel
- Clean sand and topsoil
- Red food coloring
- Spray container with water
- Disposable syringe

## Directions for Making Flow Model:

1. Secure a piece of nylon over the end of the pump sprayer with masking tape or a rubber band. The nylon will act as a pump screen.
2. Cut off the top of the plastic 2 liter container. Fill the 2 liter container approximately one-third full with small rocks. See illustration No. 1.
3. Insert the pump sprayer into the rocks and hold vertically while filling the container with a layer of sand and a layer of topsoil to within two inches of the top.
4. Insert a straw into the sand so it is near the outside of the container.

Oklahoma State University, in compliance with Title VI and VII of the Civil Rights Act of 1964, Executive Order 11246 as amended, Title IX of the Education Amendments of 1972, Americans with Disabilities Act of 1990, and other federal laws and regulations, does not discriminate on the basis of race, color, national origin, sex, age, religion, disability, or status as a veteran in any of its policies, practices or procedures. This includes but is not limited to admissions, employment, financial aid, and educational service.

Issued in furtherance of Cooperative Extension work, acts of May 8 and June 30, 1914, in cooperation with the U.S. Department of Agriculture, Robert Whitson, Vice President, Dean and Director of Cooperative Extension Service, Oklahoma State University, Stillwater, Oklahoma. This publication is issued by Oklahoma State University as authorized by the Dean of the Division of Agricultural Sciences and Natural Resources and has been prepared for both internal and external distributions through print and electronic media.

